



Service Manual

Combi Cutters

CC-34, CC-32 and CC-32s

220 – 240 V Single Phase

Vegetable Preparation Machines

RG-50 and RG-50s

220 – 240 V Single Phase

Vertical Cutter Blenders

VCB-32 and VCB-31s

220 – 240 V Single Phase



Date: 2015-10-14

Approved: Henrik Artursson

Table of contents

GENERAL	3
Installation, operation and cleaning.....	3
Tools.....	3
Lubrication and thread locking.....	3
REMOVAL AND REPLACEMENT OF PARTS	4
Base and top housing.....	4
Motor.....	4
Control board.....	6
Knife shaft.....	6
Magnetic safety switch.....	8
Rotary switch	9
Micro switch	10
SERVICE PROCEDURES AND ADJUSTMENTS.....	12
Electrical control test procedures.....	12
ELECTRICAL OPERATION	13
Component function.....	13
Component location	13
WIRING DIAGRAM	13
TROUBLESHOOTING	13

General

This service manual gives instructions for removal and replacement of parts including service procedures and adjustments for the following machines:

- Combi Cutters: CC-34, CC-32 and CC-32s
- Vegetable preparation machines: RG-50 and RG-50s
- Vertical cutter blenders: VCB-32 and VCB-31s

This service manual is prepared for the use of trained service technicians and should not be used by those not properly qualified.

Installation, operation and cleaning

Refer to HALLDE User Manual.

Tools

- Standards set of hand tools
- Set of torx bits
- Standard VOM/Multimeter with AC current tester

Lubrication and thread locking


- Loctite 243 or equivalent

Removal and replacement of parts

Base and top housing

Note! Disconnect the electric power to the machine!

1. Remove cutter/mixer bowl or feeder attachment.
2. Remove four screws and base housing from top housing.

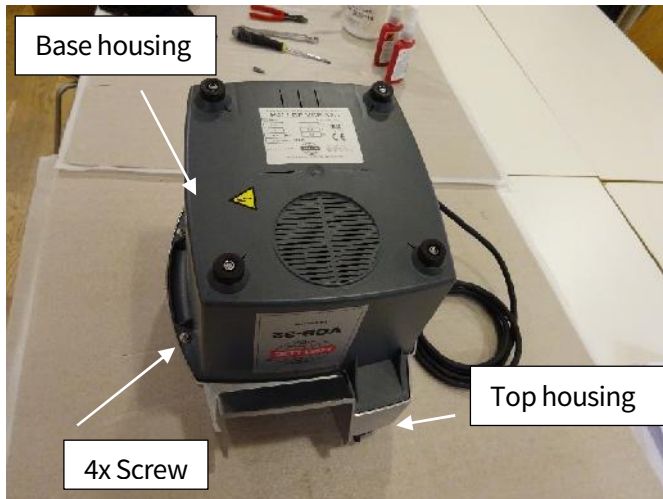


3. Install in reverse order of removal.


Motor

Note! Disconnect the electric power to the machine!


1. Remove base housing as outlined under BASE AND TOP HOUSING.
2. Tag and mark all wires.
3. Remove foam spacer from motor.
4. Remove four wire connectors from control board.

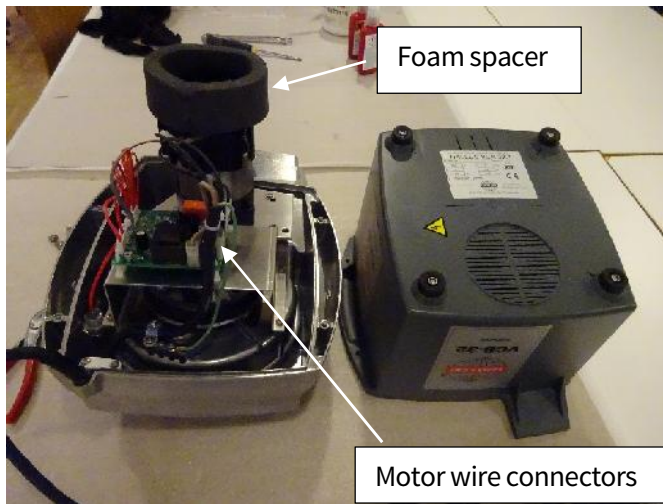

5. Remove screws from motor mounting bracket and lift motor from housing.

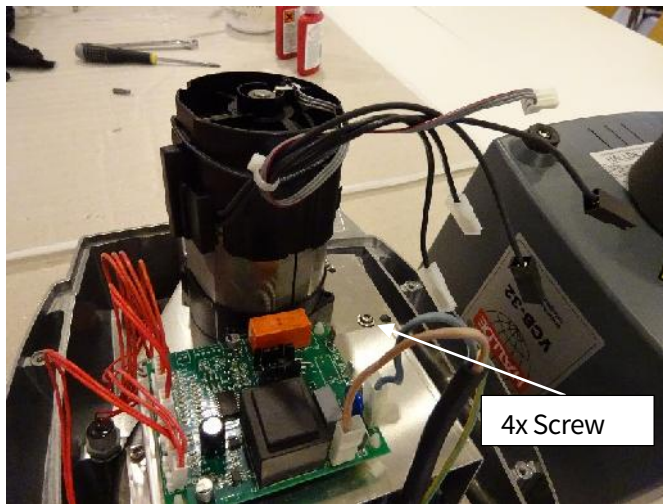

6. Remove motor, bracket, and wires from top housing. During motor installation, be sure to align drive belt correctly. The motor drive shaft should be inside the drive belt; the belt tensioner should be on the outside of the belt. Tighten the belt by pulling the motor assembly back with your thumb. Tighten the screws to lock the motor in position.

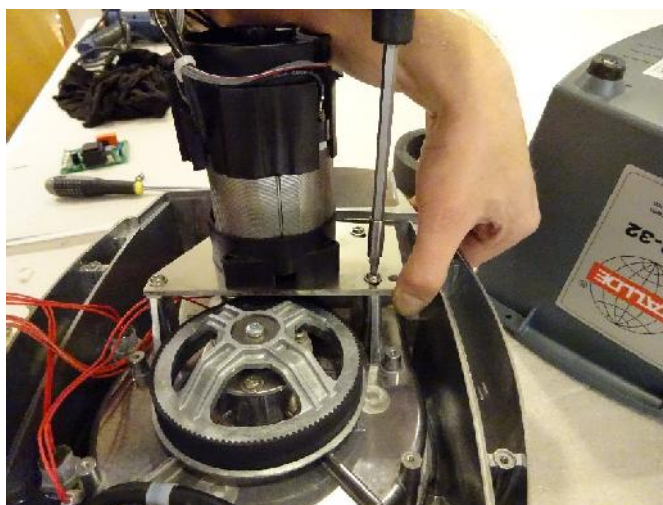


7. Install motor, brackets, and wires in reverse order of removal.


Control board

Note! Disconnect the electric power to the machine!

1. Remove base housing as outlined under BASE AND TOP HOUSING.
2. Tag and mark all wires and connectors.
3. Remove wire ties as necessary.
4. Remove connectors from control board.

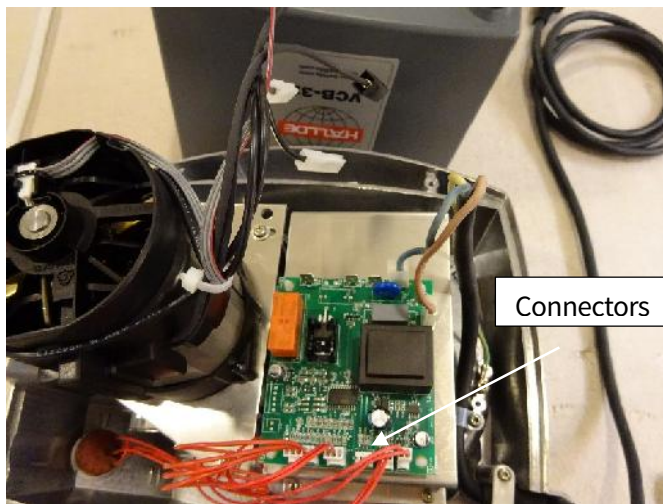

5. Lightly press the plastic holders with a pair of pliers and remove the control board.

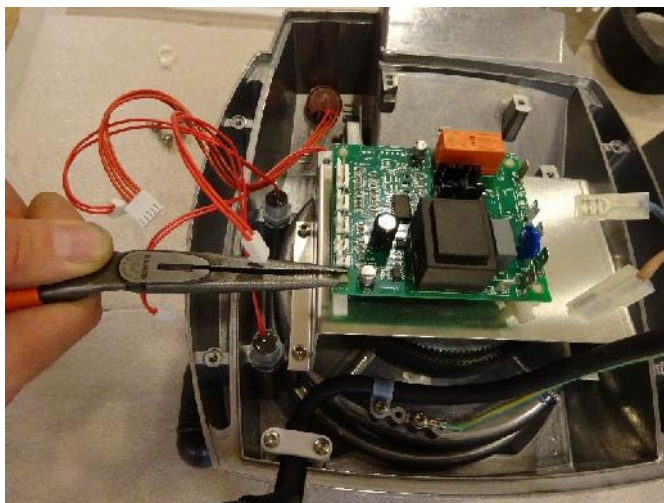


6. Install control board in reverse order of removal.

Knife shaft


Note! Disconnect the electric power to the machine!

1. Remove base housing as outlined under BASE AND TOP HOUSING.


2. Remove motor as outlined under MOTOR.
3. Remove control board as outlined under CONTROL BOARD.
4. Remove wires and wire ties from control board plate.
5. Remove torx screws and control board plate from top housing.

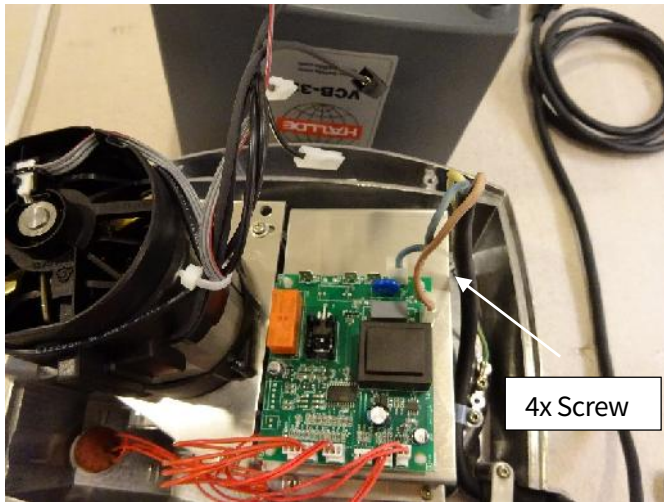


6. Remove drive belt, screw, washer, and knife shaft pulley. Note that the screw is locked with Loctite and can be difficult to remove.

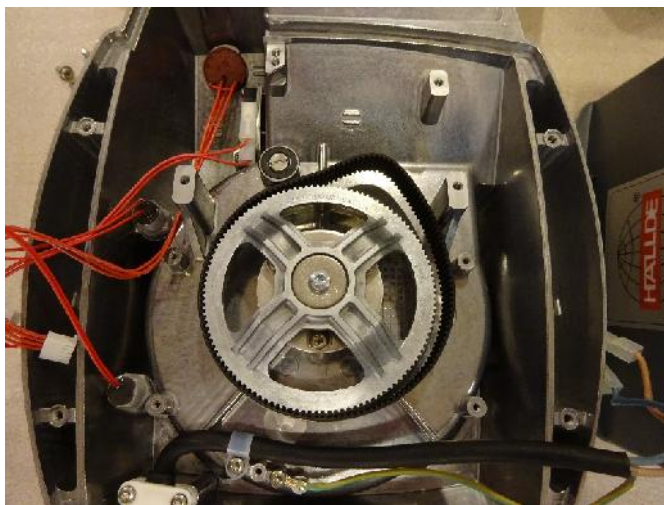

7. Remove three torx screws and bearing cover.

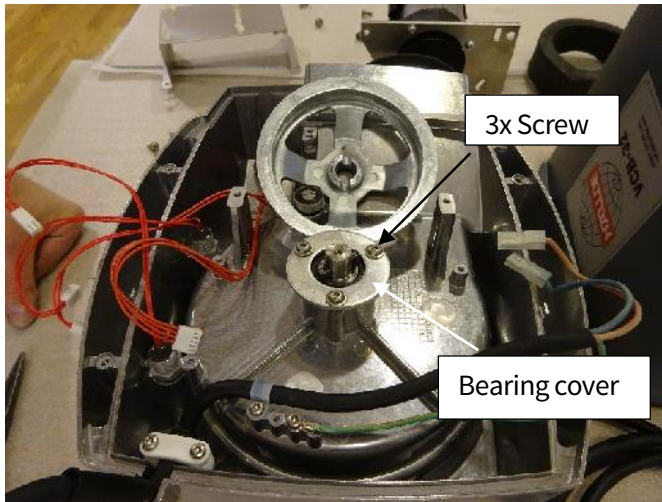

8. Carefully turn top housing over to gain access to the knife shaft. Do not pinch or bend wires when removing screw from knife shaft. Remove screw pin from knife shaft. Screw pin is locked with Loctite and some heat may be required to remove the screw pin.
9. Remove seal ring from knife shaft.

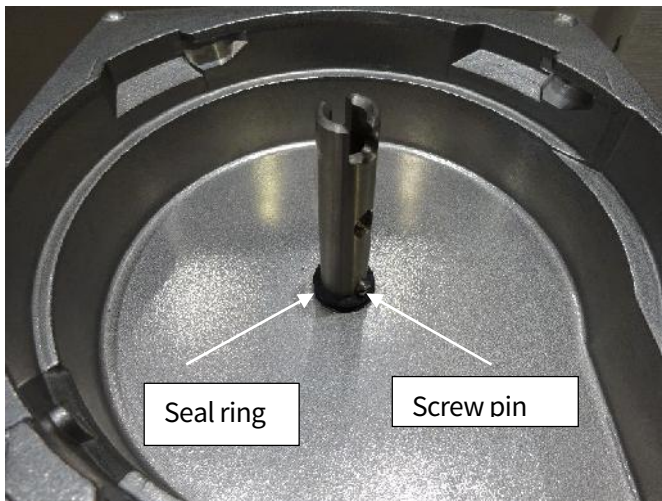


10. Tap knife shaft assembly from top housing.
11. Replace shaft assembly.
12. Install knife shaft in reverse order of removal. Add Loctite to screw pin and belt pulley screw during install.

Magnetic safety switch

Note! Disconnect the electric power to the machine!

1. Remove base housing as outlined under Remove base housing as outlined under BASE AND TOP HOUSING.
2. Remove wire ties as necessary.
3. Tag and mark all wires and connectors.

4. Remove connector from control board.
5. Remove magnetic safety switch from top housing using a pair of pliers

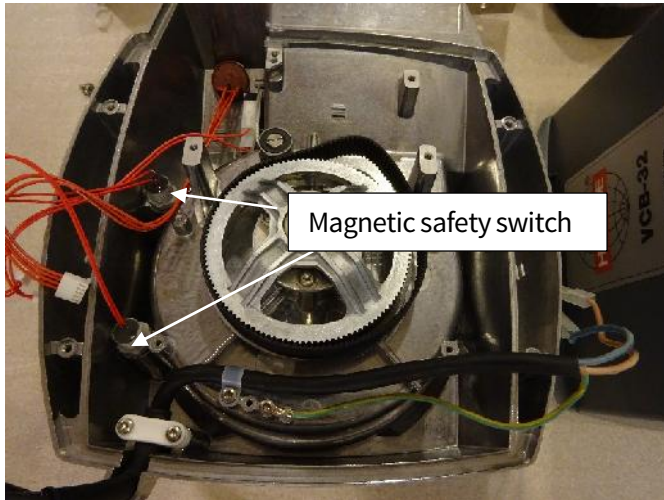


6. Install magnetic safety switch in reverse order of removal.
7. Note, CC-34, CC-32, VCB-32 have two magnetic switches. CC-32s, VCB-31s, RG-50 and RG-50s has one magnetic switch.

Rotary switch


Note! Disconnect the electric power to the machine!

1. Remove base housing as outlined under Remove base housing as outlined under BASE AND TOP HOUSING.
2. Remove wire ties as necessary.
3. Tag and mark all wires and connectors.
4. Remove connector from control board.

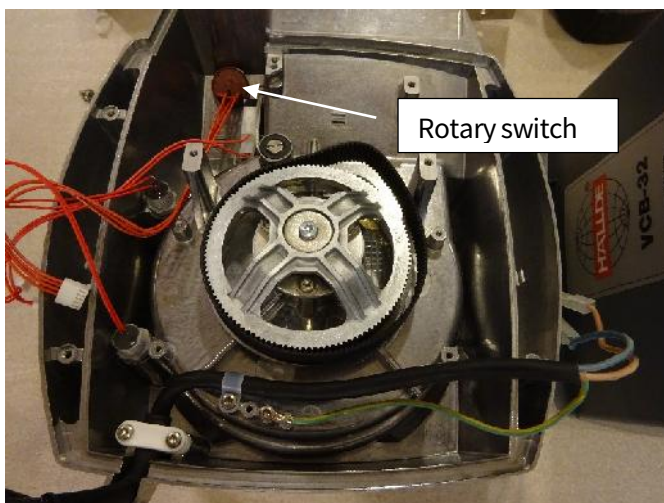

5. Turn top housing upright and support.

6. Remove knob from rotary switch.
7. Remove nut and rotary switch from top housing.

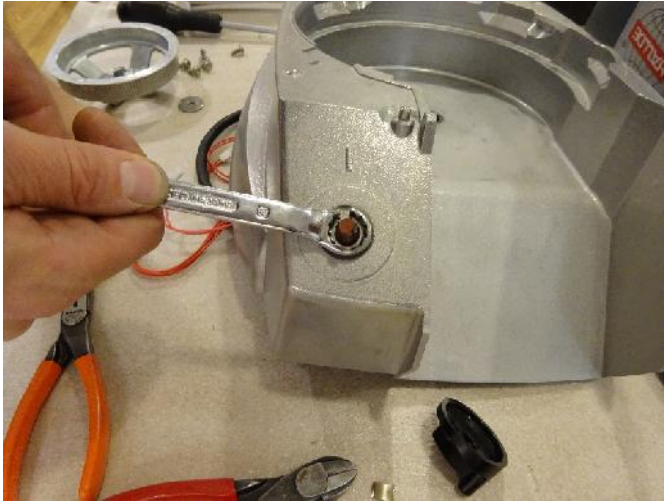


8. Install rotary switch in reverse order of removal.

Micro switch

Note! Disconnect the electric power to the machine!

1. Remove base housing as outlined under Remove base housing as outlined under BASE AND TOP HOUSING.
2. Remove wire ties as necessary.
3. Tag and mark all wires and connectors.
4. Remove 2 connectors from control board.
5. Remove two torx screws and micro switch bracket from top housing.

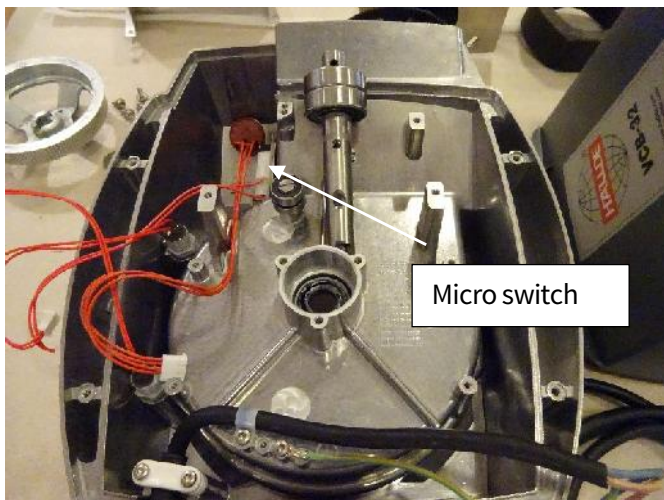

6. Remove two wires and connectors from micro switch.

7. Install new micro switch and assemble in reverse order of removal.

Service Procedures and Adjustments

Electrical control test procedures

Note! Do not install any cutting tools for the following tests!


1. Remove the feeder, any cutting tools and ejector plate.
2. Remove the lid, knife, and bowl.
3. Turn the variable speed control to the I position and check that the machine will not start.
4. Install the feeder, set the variable speed control to the I position and check that the machine stops when the feeder handle is raised and re-starts when the handle is lowered.
5. Set the variable speed control to the I position, raise the feeder handle and check that the shaft stops rotating within 4 seconds.
6. Install the bowl and lid and set the variable speed control to the I position and check that the shaft stops rotating within four seconds after the lid has been lifted and turned counterclockwise as far as it will go.
7. Remove the power supply plug from the wall socket. Check that the electrical cable is in good condition and has no cracks. If the electrical cable is worn or damaged or shows signs of cracking, or if any of the above safety functions are not in good working order, the machine must be repaired before put back in operation.

Electrical Operation

Component function

Motor – M1	Drive motor
Rotary switch	Allows operator to set preferred speed
Micro switch	Keeps motor from turning if feeder is not installed properly
Magnetic switch speed control	Senses which attachment is installed and automatically sets speed range
Magnetic switch safety control	Keeps motor from turning if accessory is not installed properly

Component location

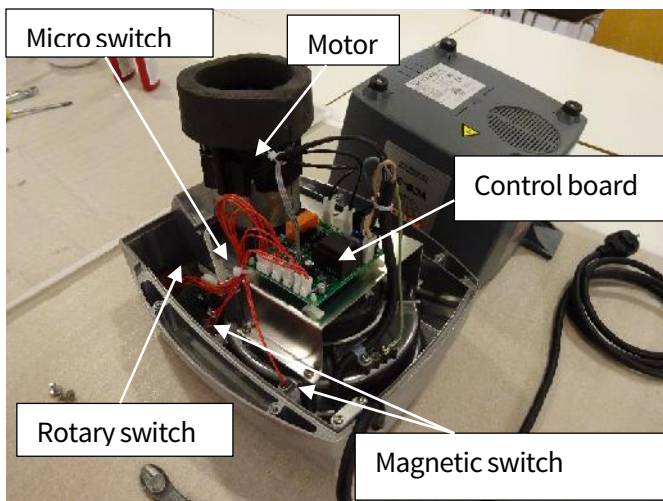

Wiring Diagram

Please refer to user manual or www.hallde.com for wiring diagram.

Troubleshooting

Note! To eliminate the risk of damage to the motor, the CC34, B32, and C32 are fitted with thermal motor protection that automatically switches off the machine if the temperature of the motor should become too

high. The thermal motor protection has automatic reset, which means that the machine can be started again when the motor has cooled down, which usually takes between 10 and 30 minutes.

Symptoms	Possible Causes
Machine will not start.	<ol style="list-style-type: none"> 1. No voltage, check power supply 2. Feeder or bowl lid is not installed properly 3. Safety interlock open 4. Magnetic switch speed control open 5. Magnetic safety switch open
Machine starts but stops during use, will start after waiting several minutes	<ol style="list-style-type: none"> 1. Check for overload conditions 2. Malfunctioning motor
Low output or bad cutting results	<ol style="list-style-type: none"> 1. Wrong cutting tools used 2. Wrong combination of cutting tools uses, i.e. combination for slicer and dicing grid 3. Cutting tools dull. 4. Too high speed 5. Malfunctioning motor
Stops when operating	<ol style="list-style-type: none"> 1. Safety interlock open or malfunctioning 2. Magnetic switch speed control open or malfunctioning 3. Magnetic safety switch open or malfunctioning 4. Speed control switch malfunctioning
Motor runs but knife shaft does not turn	<ol style="list-style-type: none"> 1. Check drive belt

По вопросам ремонта и приобретения запасных частей, обращайтесь:

ChefStore LLC, ООО «ШефСтор»



+7 (495) 212-18-44, +7 (800) 500-16-87

service@chefstore.ru
www.chefstore.ru